

8 Settings

- The menu items depend on the configuration of your DE915/DE935.
- Battery**
Choose the type of battery installed
- Confirmation tone**
The confirmation tone can be switched on or off
- Date and time**
To change date and time, press navigation buttons "UP" and "DOWN" until the correct number is displayed and confirm it by pressing the "OK" button
- Detailed status**
– Status of the installed battery
– Signal strength at the current position (DE935 only)
– Signal strength during the last measurement
– Signal strength when the last message was received

Signal strength indicator (RSSI)	
	Best signal strength
	No signal available (no reception)

- Backlight**
Switch the automatic backlight on or off
- Out of range alarm**
Switch the out of range alarm on or off
- Device information**
Shows the serial number and the current firmware version
- Contrast**
Adjust the contrast from "1" (bright) to "8" (dark)
- Message font**
Choose the font size for the message text
- Melodies**
Change the melody for a selected address
- Call reminder**
Choose the type of reminder: flashing and/or a beep
- Language**
Change the menu language
- Key lock**
Switch the automatic key lock on or off
- Key click**
Switch the key click on or off
- Key vibration**
Switch the vibration on or off when you reach the end of a menu
- Vibration**
Switch the vibration on or off
- Alarm clock**
Set the alarm time and activate or deactivate the alarm

9 Profiles



 
The DE915/DE935 uses two types of profiles: select and toggle profiles. While only one select-profile can be activated, multiple toggle-profiles can be activated simultaneously. The picture to the left shows that two select-profiles ("select profile 2" and "select profile 3") are available. The profile currently active is "select profile 2". Toggle-profiles may be (de)activated independent of any other profile. You will recognize toggle-profiles by the "check-box" in front of their profile name.

10 Power-on lock

You must enter a PIN code at the start-up menu when the power-on lock is activated. Press navigation buttons "UP" and "DOWN" to enter the code. When the correct number is displayed, confirm it by pressing the confirmation button "OK". If a wrong code has been entered ten times, the device will be locked. It can only be unlocked by the programming software.

11 Alarm clock

Alarm clock settings



Choose "Alarm clock" in the menu to set the alarm. Use navigation buttons "UP" and "DOWN" to switch the alarm on or off. You can set the alarm time by pressing both navigation buttons "UP" and "DOWN" and then confirm with "OK".

Alarm confirmation



When the alarm sounds the display shows "snooze" or "stop". If you choose "stop" the alarm will be stopped. It remains active and will sound again on the following day. A symbol in the start-up display shows you whether the alarm is activated or not.

If you chose "snooze" the alarm will stop temporarily and will sound again after five minutes.

Switch on by alarm clock

If the alarm is activated while the DE915/DE935 is switched off, it will be switched on at the alarm's set time and the alarm will sound.

12 Charging batteries / power supply

While charging, the charger's LED shines orange. The colour changes to green once the charging process is completed. The charging state and the name of the charging profile are displayed on the device during charging. The DE915/DE935 offers a profile for either alerting in a multi or single charger.

Battery

You may use the following battery sizes: AA, LR6, AM3 or mignon:

- Dry cell batteries
- Nickel metal hydride rechargeable batteries

Important Advice

- Do not recharge dry batteries to reduce the risk of fire or explosion.
- Use only genuine Swissphone chargers for safety reasons.
- Do not throw batteries into a fire to prevent an explosion.

13 Miscellaneous

See the Swissphone homepage <http://www.swissphone.com> for additional information for this and other company products.

Safety guidelines

- Do not use this device in explosive areas.
- Do not open the device.
- Do not remove any labels.

Disclaimer

Swissphone assumes no warranty and no liability about the content of this document. Changes to the contents of this manual are made from time to time.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

The device meets the provisions of the European directive R&TTE 99/05/EG ("Radio Equipment and Telecommunications Terminal Equipment").
You can request a copy of the declaration of conformity from info@swissphone.com.

User Manual DE915/DE935

1 Introduction



We would like to congratulate you on your new receiver. In purchasing the new Swissphone DE915/DE935 you have chosen a high quality device. The three-button operated Swissphone DE915/DE935 is a noteworthy product thanks to its combination of attractive design, great flexibility and high quality. There are several different configurations available for your DE915/DE935, so some functions described in this manual may not be

available on your device. This manual provides information to help you operate your device to its optimal ability; therefore you should always keep it handy. We hope you enjoy reading this manual and using your Swissphone DE915/DE935.

2 First Steps

Installing Battery

The DE915/DE935 uses dry cell as well as rechargeable batteries. The designated place for the battery is at its backside. Insert it carefully into the device and paying careful attention to the contacts. Ensure that the battery position matches contacts perfectly before you close the back cover. The DE915/DE935 will start up automatically after the battery has been installed properly and will perform a start-up test. When the start-up test is completed, indicate whether you are using dry cell or rechargeable batteries in the settings first. See chapter "Recharge battery/power supply" for more information.

Switching on

To manually switch on the DE915/DE935, press and hold any of the three buttons at the front until the start-up screen appears.

3 Key functions and navigation

Confirmation button OK

- Read messages
- Confirm and acknowledge alerts
- Show user menu
- Confirm settings

Navigation button UP

- Navigate up or to the right
- Change settings
- Return to the start-up screen by holding

Navigation button DOWN

- Navigate down or to the left
- Change settings
- Display the status
- Show secondary menu items by holding



Enter the user menu

Press "OK" to enter the user menu. You can navigate through the menu by pressing the navigation buttons "UP" and "DOWN". Confirm your selection by pressing "OK". Every key-stroke activates the backlight.

Start-up screen

To return to the start-up screen, press and hold the “UP” button for two to four seconds. The DE915/DE935 returns to the start-up screen automatically when no button is pressed for a specified amount of time.

Deactivating key lock (if turned on)

To deactivate the key lock, press both navigation buttons “UP” and “DOWN” simultaneously.



Initial screen

The initial screen is displayed when you press the upper navigation button “UP” at the start-up screen.

Device status

Press the lower navigation button “DOWN” on the start-up screen to display battery charge in percentage.

Secondary menu

To display the secondary menu, press and hold the lower navigation button “DOWN” at the start-up screen for two seconds. Rarely used functions can be stored in the secondary menu to reduce the length of the main menu. Leaving the secondary menu will bring you back to the start-up display.

4 Display

Profil 1
Di 25.0kt 2011 12:10

The start-up screen is divided into four sections:
1st line: status
2nd line: profile
3rd line: info: hint, warning, error messages
4th line: date, alarm, time

Status

The following symbols can be displayed in the status:

Type of alerts:		Loud alert
		Quiet alert
		Discreet alert
		Silent alert
Field strength alarm		No message reception
Key lock		Key lock activated
Battery charge		Battery fully charged, ¾, ½, ¼
		Recharge battery!

Profile

This line shows the selected profile.

Info

Hints, warnings and error messages will be displayed.


Date and time

This line shows date, time and the status of the alarm clock.

Alarm clock		Alarm active
		Alarm on snooze

5 Processing messages

 Receiving and reading new messages



As soon as your DE915/DE935 receives a message, you will be alerted via tone, vibration and illumination. You can stop the alert by pressing the confirmation button “OK”. The message headline includes time and RIC name. The downward pointing arrow indicates additional text.

Message marked as read

To scroll to the end of a message, press either “OK” or the lower navigation button “DOWN”. The message will be marked as read as soon as you have scrolled to the end. To read the next message in the list, press “Next message”.

Scroll messages

When scrolling is activated, messages can be scrolled by pressing the navigation buttons “UP” and “DOWN”. To mark a message as read, press the confirmation button “OK” or the lower navigation button “DOWN” at the end of a message.

Inbox

Messages are stored in the inbox or a corresponding folder. Unread messages are marked by an “!”. You will be notified of unread messages at the start-up screen.

Unread message →

Protected message →

Unread message in the inbox →

Unread message in folder A or B →

Protect/delete messages

Messages are protected by “Protect message”. “Remove protection” will remove the protection. To delete a message, select “Delete message”. “Empty folder” will delete all messages in this folder.

Lock messages or folders with a PIN (DE935 only)

A message can be locked by “lock message”. A PIN code must be entered in order to read it. You can also lock a complete folder with “lock folder”. Messages can be locked after a pre-determined timeout. After a timeout, they can be read only after you enter the correct PIN code.

Call reminder

If your device has been configured with “call reminder”, you will be notified of unread messages after a pre-programmed period of time (see chapter “alerting” for further information). The call reminder will be turned off once all messages have been read.

6 Main menu

Press the confirmation button “OK” at the start-up screen to enter the main menu. You can navigate to the menu items by using both navigation buttons “UP” and “DOWN”. Confirm the selected menu item with “OK”.

Main Menu

- **Alert** Choose between “Loud”, “Quiet”, “Discreet” and “Silent”
- **Switch off** Switch off the device
- **Settings** Various settings for your device
- **Last/unread messages** The last or all unread messages can be displayed by pressing the confirmation button “OK”
- **Messages** Several inboxes can be stored here (Inbox, Folder A + B)
- **Inbox** Manage or read messages (folders may have different names)
- **Folder A, B (DE935 only)** Manage or read messages in message folders (folders may have different names)
- **Profile** Select a specified profile
- **Back** Return to the previous menu level

The menu in your device may differ from this description, because it can be configured by the programming software. See the programming software manual for further details of how to program the various menu items.

7 Alert

Choose between the following forms of alerting in the “alert” menu:

- **Loud** The alert pattern is played as specified by the programming software.
- **Quiet** The alert pattern is played quietly.
- **Discreet** The alert is indicated by vibration and a display light. After ten seconds the alert pattern is played quietly.
- **Silent** The alert is indicated by vibration and display light for ten seconds. The device is completely silent.

The following chart shows the alert pattern for the corresponding configuration:

Symbol	Alerting	Alerting for messages with high priority
	 Standard signal	 Standard signal
	 Quiet standard signal	 Standard signal
	 10 seconds vibration, sound	 10 seconds vibration, standard signal
	 10 seconds vibration	 10 seconds vibration, standard signal

sound as specified

quiet sound

vibration

High priority messages will always be indicated by a loud alert and red display light.